 







Supply 230 volt 50 Hz  
or from Box for Electric heater page 3

Wiring diagram for Turbovex TX 3100A Mainboard


Dato: 2023.02.01  
diagram 2 of 4 Ver. 4.0  
Copyright ©



 **Temperature sensor**  
 T1 = fresh air (outside the top cone)  
 T2 = Supply air (In the bottom cone)  
 T3 = Extract (behind service hatch)  
 T4 = Exhaust air (inside the top cone)

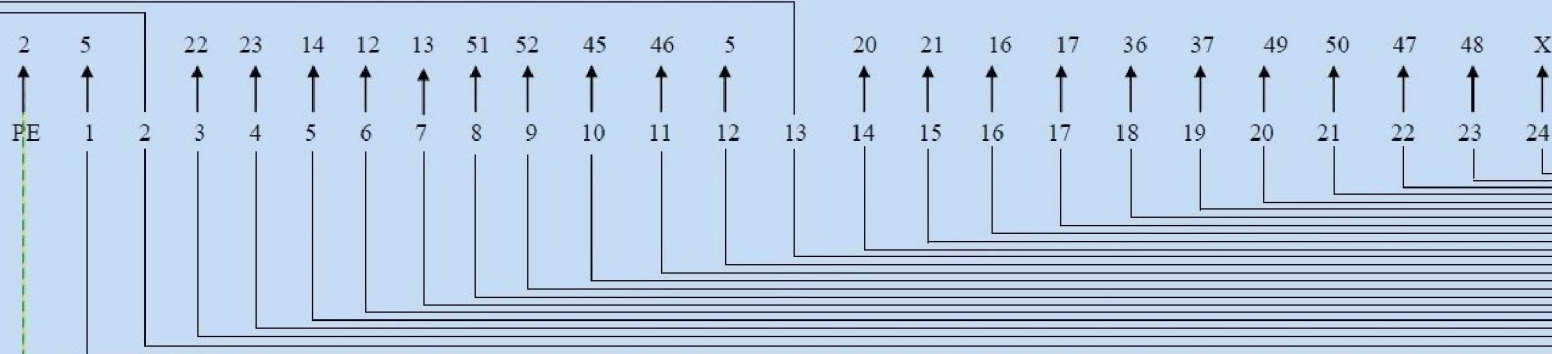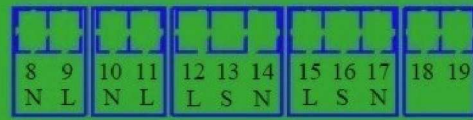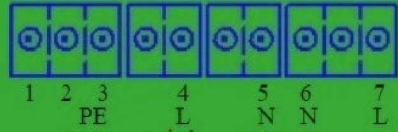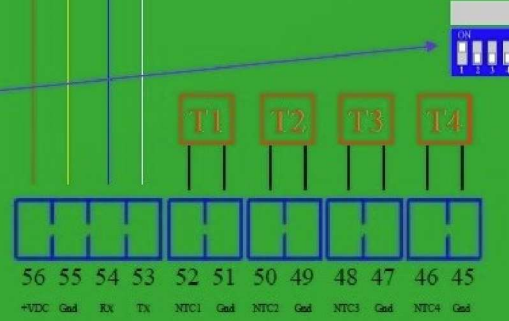


From Page 1 ←

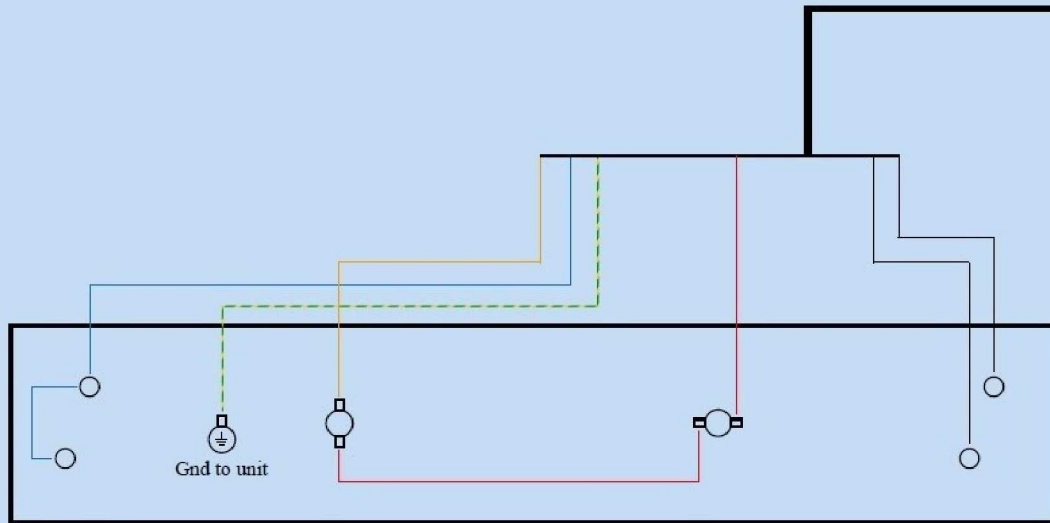


Electric heater



Electric heater foto

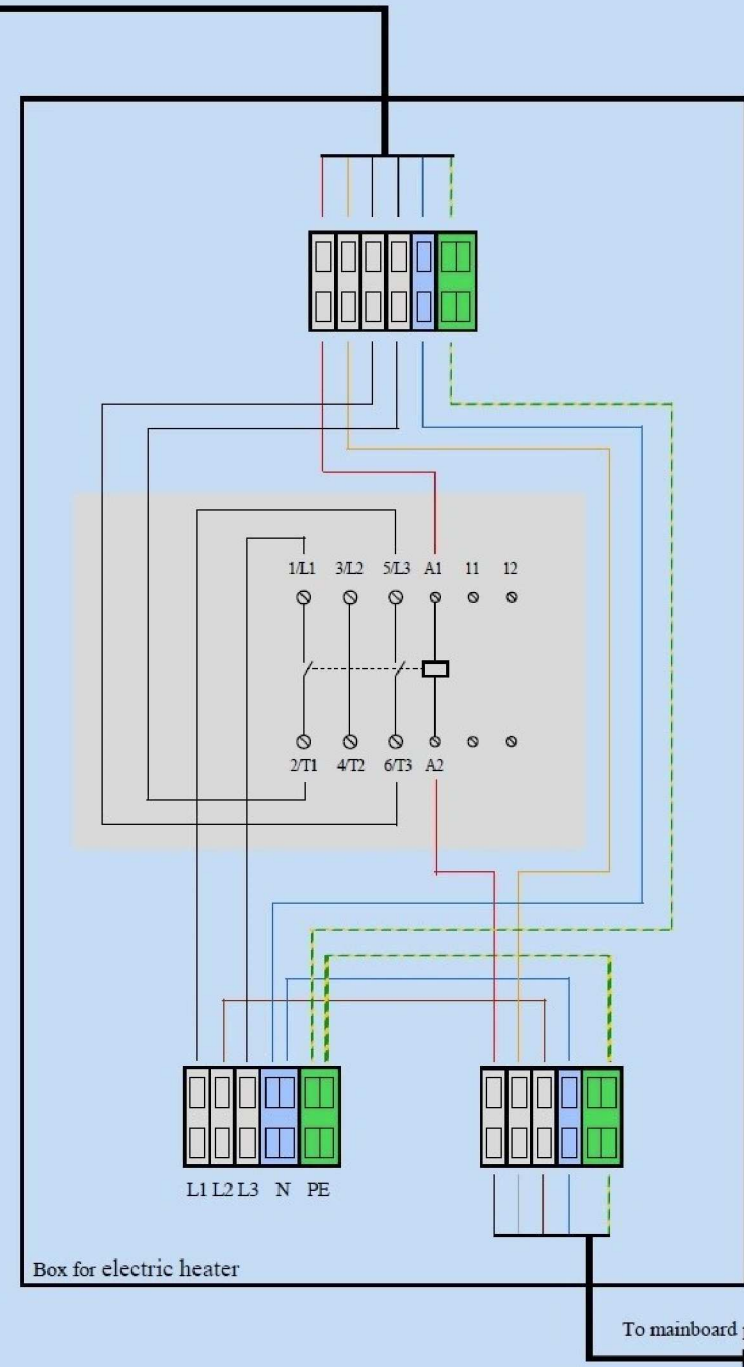

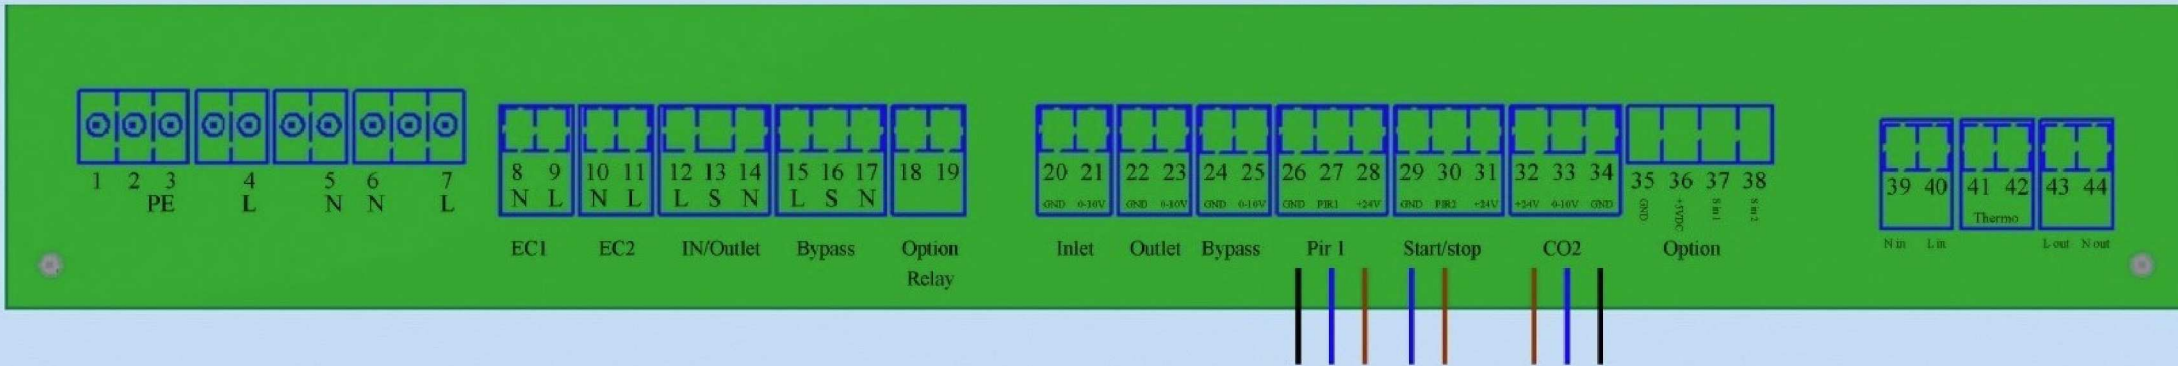


**PIR / Hygrostat**

**Setup and operation of sensor**


To operate with the sensor, system must be started as a PIR-operation

**Setup und Betrieb des Sensors**


Um mit dem Sensor-System ausgeführt werden muss als PIR-Operation gestartet werden.

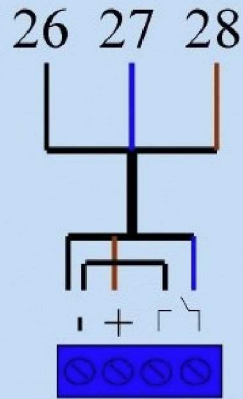

PIR

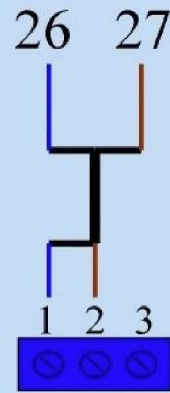

Hygrostat

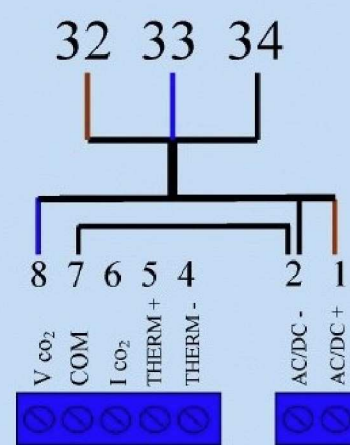

CO2